


Wire your Starter Kill using our **PREWIRED** Starter Kill Socket and Relay
 (Actual Relay Color May Vary)

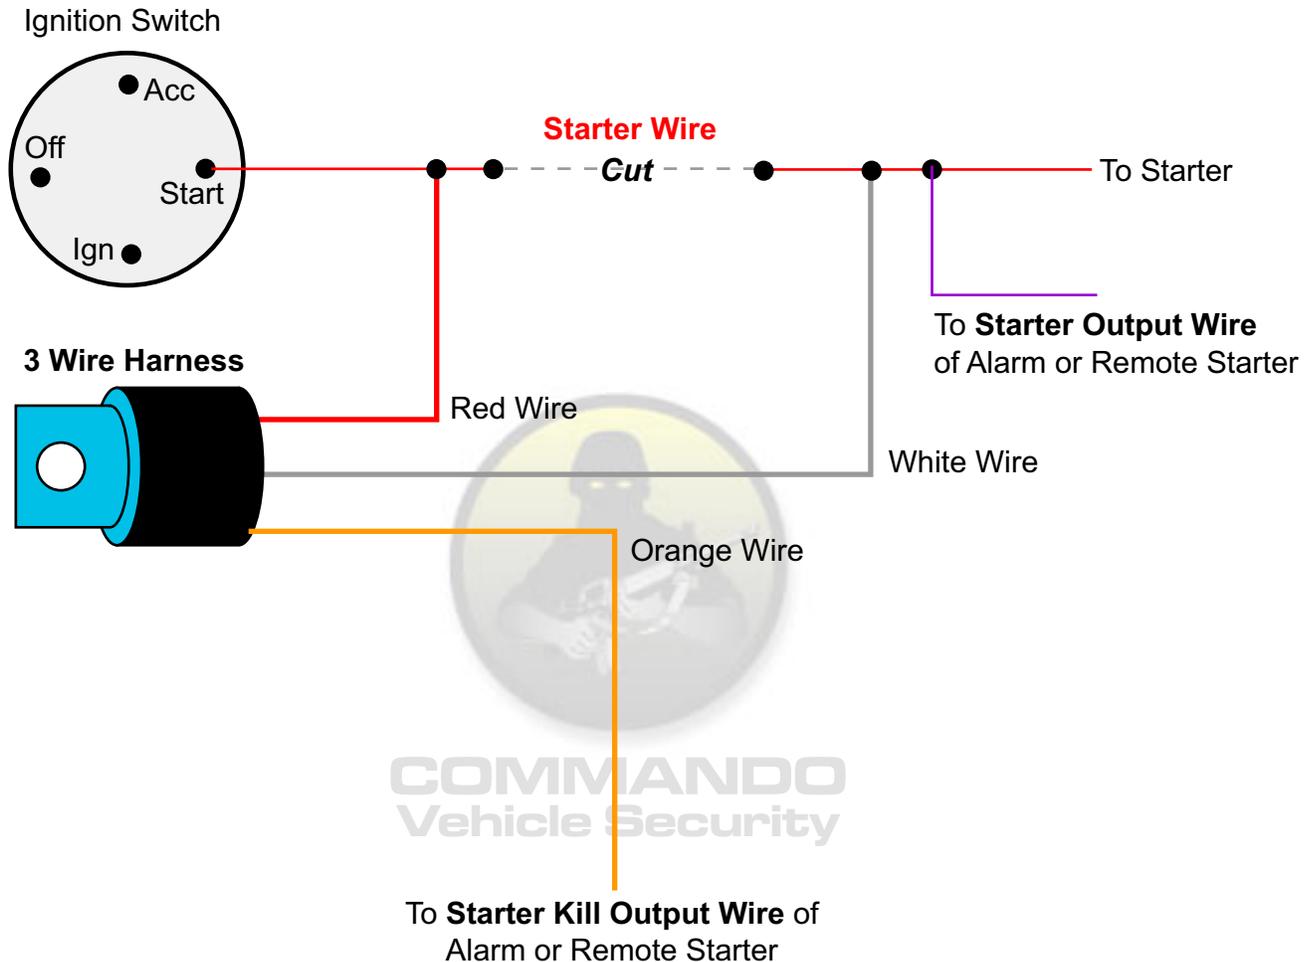

Find the wire in the Ignition Harness that shows +12 Volts **ONLY WHEN CRANKING!**
 Cut that wire in two and insert the 3 Wire Relay and Socket as shown above.

ATTENTION: This wiring information is being provided free of charge and on an "as is" basis, without any representation or warranty. It is your responsibility to verify any circuit before interfacing with it by using a digital multimeter. GNU Industries, Inc. assumes no responsibility with regards to the accuracy or currency of this information. Proper installation in every case is and remains the responsibility of the installer. GNU assumes no responsibility resulting from an improper installation, even in reliance upon this information.