


# Adding Door Lock Actuators

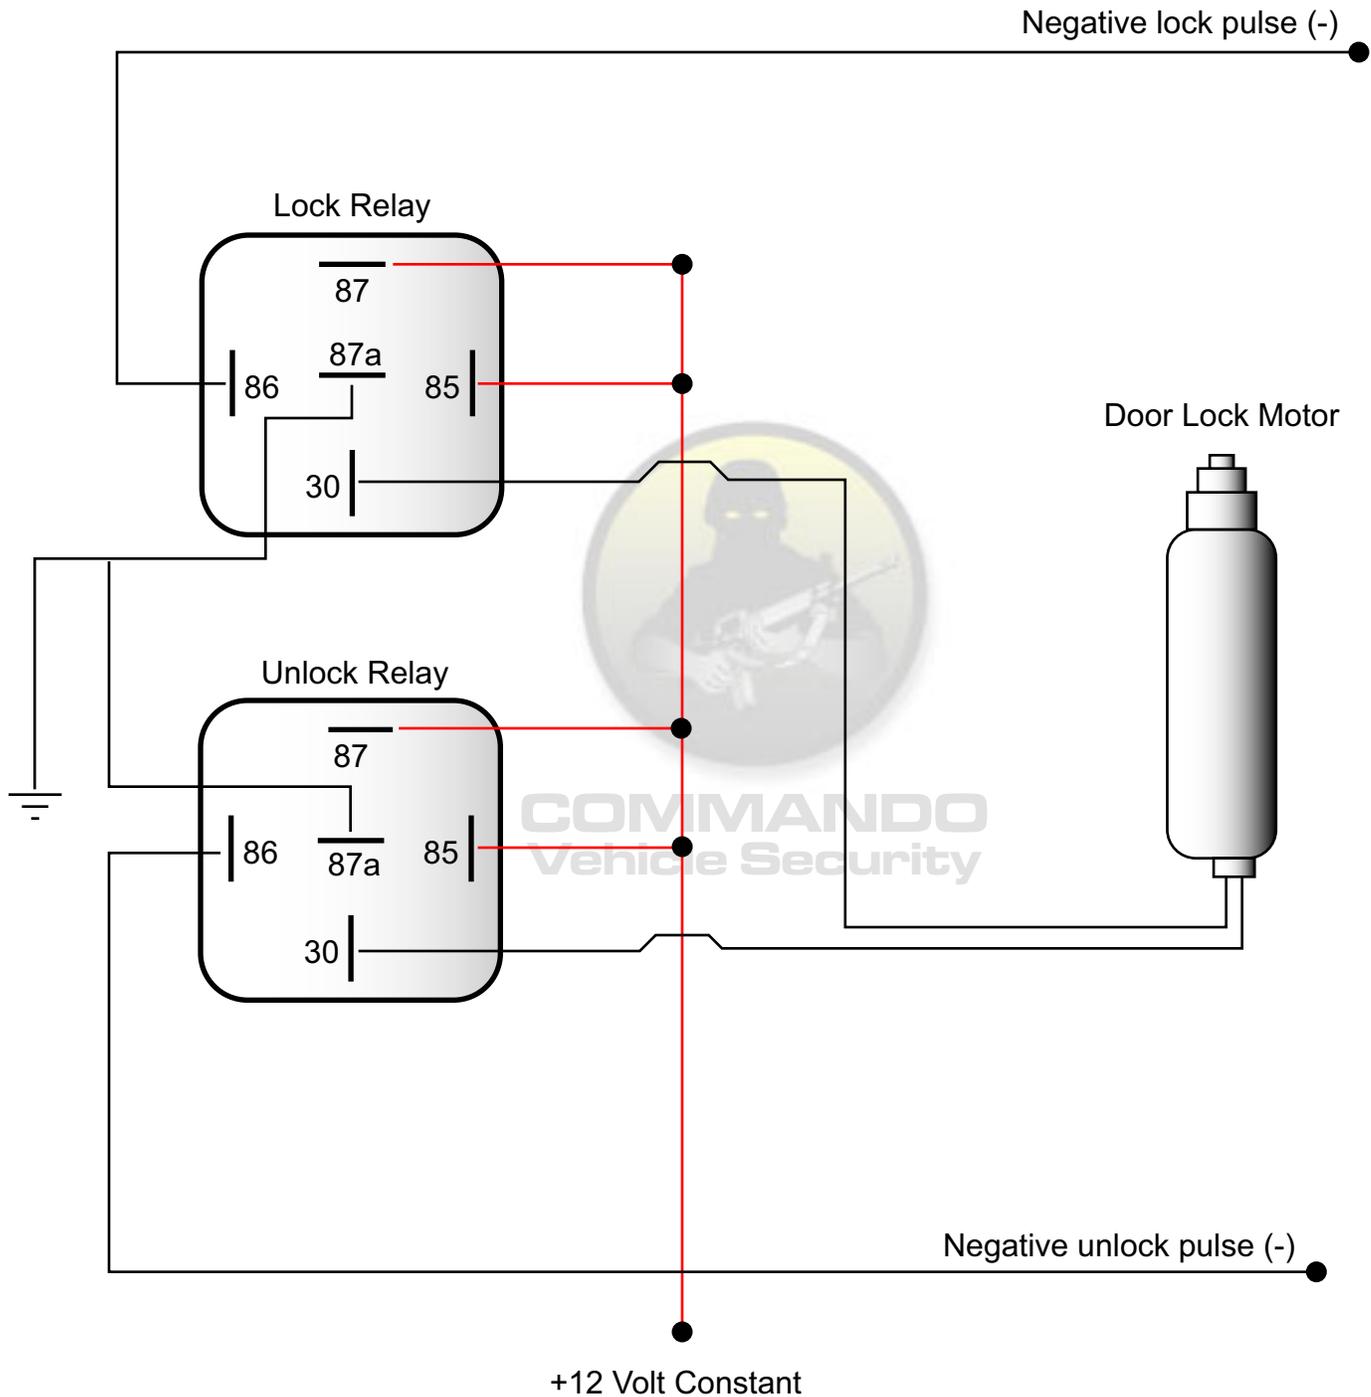

This relays configuration is used when adding a doorlock actuator or actuators to a vehicle not equipped with electric locks. More actuators can be added by connecting all of them in parallel across the relays.

ATTENTION: This wiring information is being provided free of charge and on an "as is" basis, without any representation or warranty. It is your responsibility to verify any circuit before interfacing with it by using a digital multimeter. GNU Industries, Inc. assumes no responsibility with regards to the accuracy or currency of this information. Proper installation in every case is and remains the responsibility of the installer. GNU assumes no responsibility resulting from an improper installation, even in reliance upon this information.