



# Negative Pulse Door Locks

Connect to vehicle's  
**Lock** wire

Connect to vehicle's  
**Unlock** wire

**Lock** pulse from  
alarm or starter (-)

**Unlock** pulse from  
alarm or starter (-)

White with Green Wire under body control module

COMMANDO  
Vehicle Security

ATTENTION: This wiring information is being provided free of charge and on an "as is" basis, without any representation or warranty. It is your responsibility to verify any circuit before interfacing with it by using a digital multimeter. GNU Industries, Inc. assumes no responsibility with regards to the accuracy or currency of this information. Proper installation in every case is and remains the responsibility of the installer. GNU assumes no responsibility resulting from an improper installation, even in reliance upon this information.